

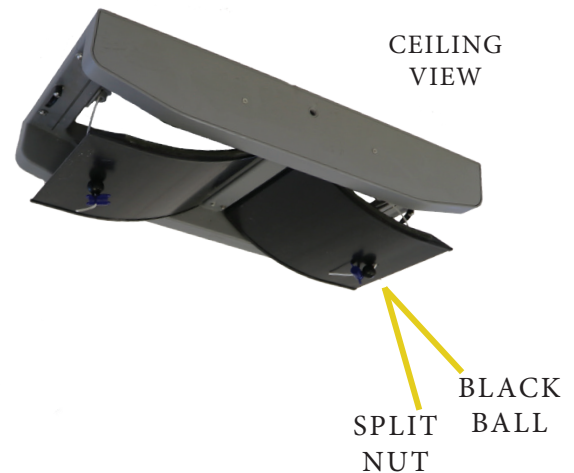


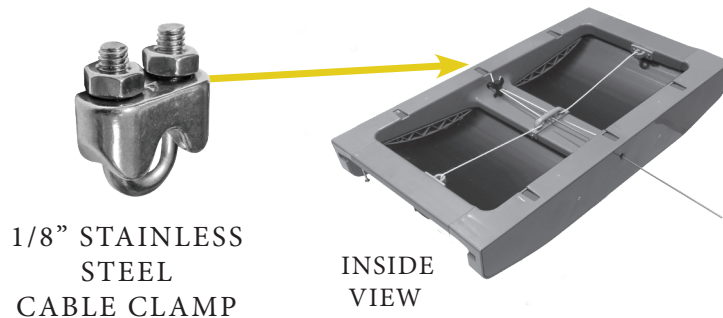

DL1927 INSULATED 2-WAY ATTIC INLET


Installation Instructions

DO NOT STORE IN
DIRECT SUNLIGHT

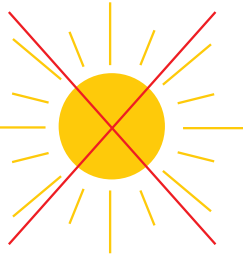

INSTALLATION INSTRUCTIONS

- Need framed opening of 24.75" x 16"
- Install attic sleeve in framed opening
- Run bead of caulk around the top, outside edge of the inlet.
- Fasten inlet to the ceiling with 10 - #10 x 2" screws (supplied).
- Run pull line through the inlet and center winch blocks.
- With actuator in full closed position, fasten nylon pull strings close to outside edge of inlet with stainless steel clamp.
- With black ball and split bolt nut, anchor lid to closed position.
- Open and shut inlet a few times. Then readjust lids as needed.

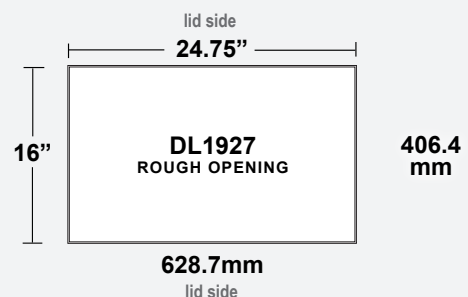

(563) 875-6257 or 1-800-553-4102

www.doublel.com

www.youtube.com/doublelgroup