



DOUBLE L
GROUP LLC

DirectJet Pop Door



Mounting Instructions

Double L Group LLC
2020 Beltline Rd | Dyersville, IA |
(563)875-6257 | sales@doublel.com
| www.doublel.com


Step 1

Place the mounting kit at the back of the flange, then place the frame in front of the rough opening made.



Step 2

Make sure the frame is pressed horizontally and smooth in the wall opening. Then secure the frame to the wall with (6) screws through the flange in the locations pointed out below. Ensure these screws are sunken into the flange on the upper and lower side so the slide won't hit the screws when opening.

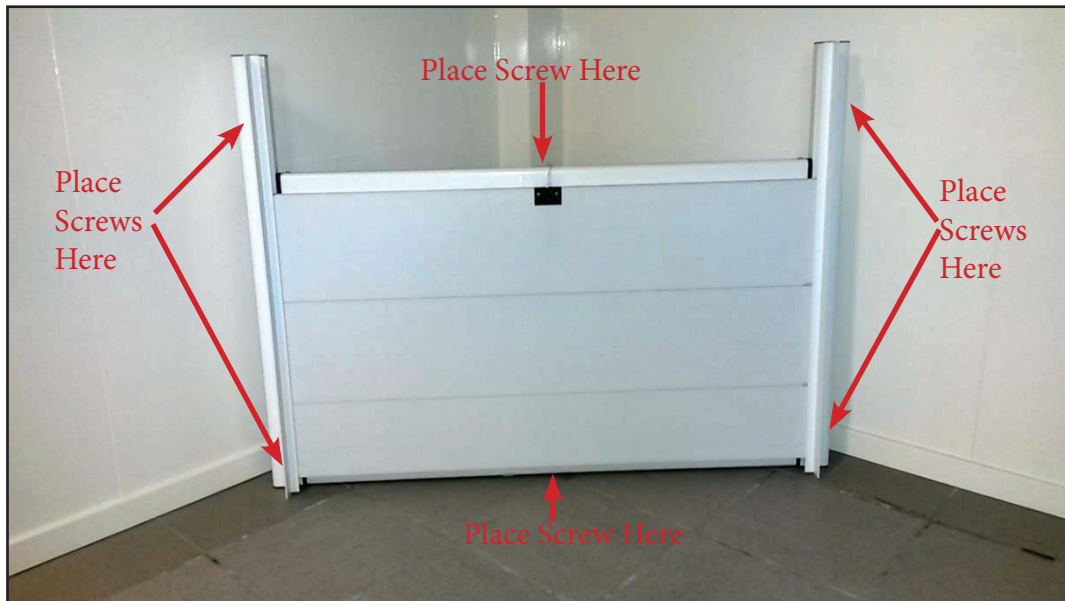

Step 3

If you have not already place the slides on the pop hole then connect the cords to the main cable in the system.

