




RETROAIRE WALL INLET


Assembly Instructions

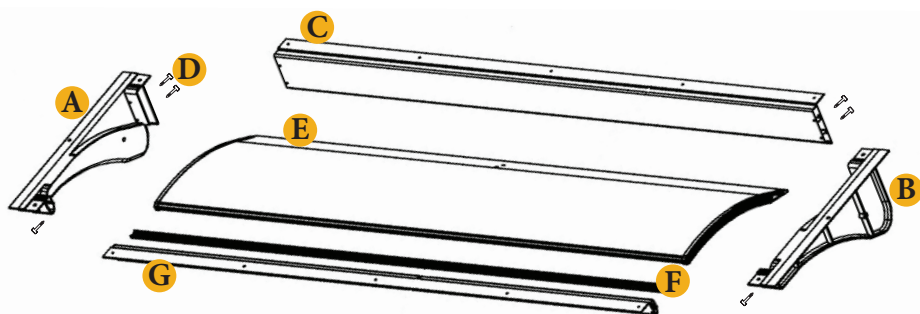


PARTS LIST

- A Left Endcap
- B Right Endcap
- C Long Frame Section w/ Section w/ Brush Seal
- D Plastic Nails (6)
- E Louver
- F Plastic Hinge
- G Long Frame w/ Hinge Profile


INLET ASSEMBLY INSTRUCTIONS

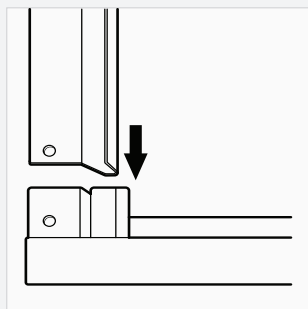


Step 1. Install frame profile with brush seal onto side endcap.

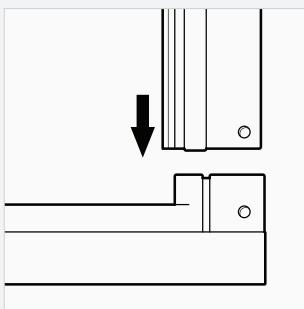


Step 2. Install long frame section with hinge profile onto side endcap.

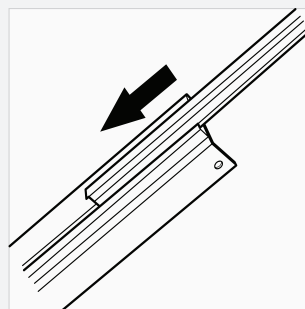


Step 3. Slide plastic hinge onto inlet hinge profile.

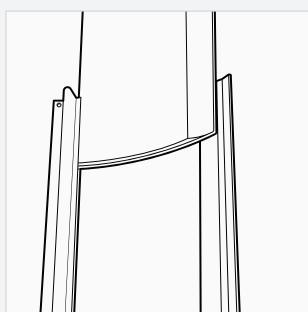

Step 4. Slide curved louver blade onto plastic hinge.

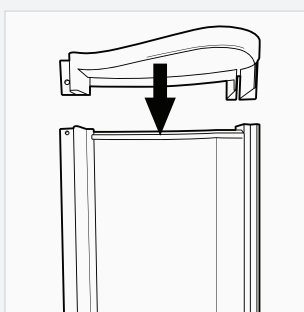

Step 5. Install other side endcap.

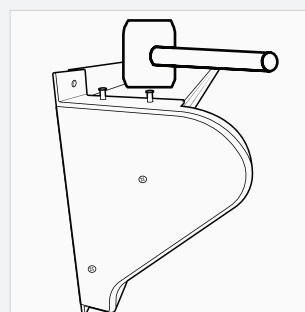

Step 7. Using a rubber mallet, install six plastic nails in holes, securing inlet together.