




RD1200 GRAVITY INSULATED ATTIC AIR INLET

Installation Instructions

RD1200 RAYDOT
GRAVITY KIT:
#090813CH

RD1200 GRAVITY INLET PARTS

	DESCRIPTION	PART NO.	QTY.
A	Bolt 1/4" x 2"	031011	4
B	Bent Washer 1" Flat	600005BT	4
C	Flat Washer 1" Flat	600005WA	4
D	Hex Nut 1/4"	600003BO	4
E	Weight Rod	090857RD	2
F	1 lb. Weight	90833	2
G	Rubber Grommet	090849BE	4
H	Swivel Arm	090837BE	2
I	Plastic Shoulder Wash	090838BE	2
J	#10 x 1 1/2" Screw	910007SC	4
K	Lid with Hinge	090852DL	2
L	Hinge Only	910002HP	2
M	2-Stage Shutoff w/Screw	90831	2

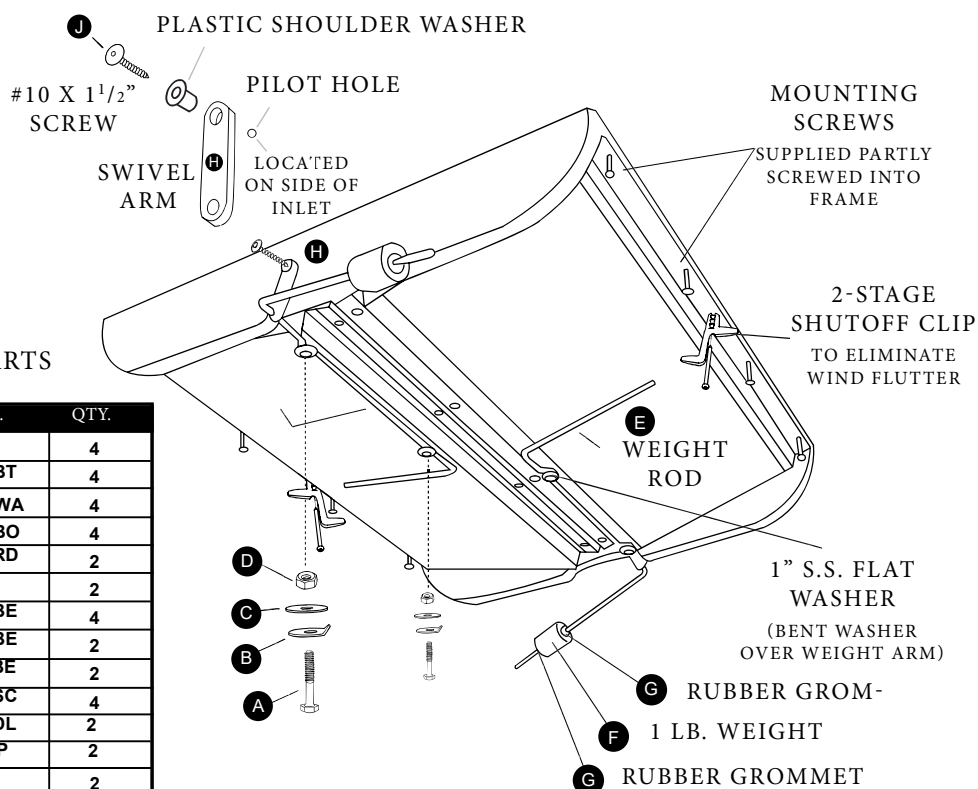

INSTALLATION INSTRUCTIONS

- Fasten inlet to the ceiling with 8 - #10 x 1 1/2" stainless steel screws provided. (The inlet must be fastened squarely to ensure door opens freely. The doors can be adjusted by loosening the hinge screws and repositioning the door.)
- Fasten weight arm to bottom of hinge using 2 - 1/4" x 2" stainless steel bolts, 2 - 1" stainless steel flat washers, 2 - 1" stainless steel bent washers, & 2 - 1/4" stainless steel head nuts.
- Slide the nylon swivel arm over the end of the weight arm and attach to the side of the inlet (locate pilot hole), using a #10 x 1 1/2" stainless steel screw. (Note: exploded view above showing where the shoulder washer is located).
- Slide a rubber grommet over the end of the weight arm, followed by the 1 lb. weight and then a second rubber grommet. Adjust to desired location.
- With door closed, fasten 2-Stage Shutoff clip (locate pilot hole) using a #10 x 2 1/2" screw with a #10 x 3" or longer driver bit.

(563) 875-6257 or 1-800-553-4102

www.doublel.com

www.youtube.com/doublelgroup