


Basic Goat & Sheep Feeder

44.5"L x 32"W x 45"H
Weight: 81 lbs.



ASSEMBLY & INSTALLATION INSTRUCTIONS

Basic Goat & Sheep Feeder Component Parts

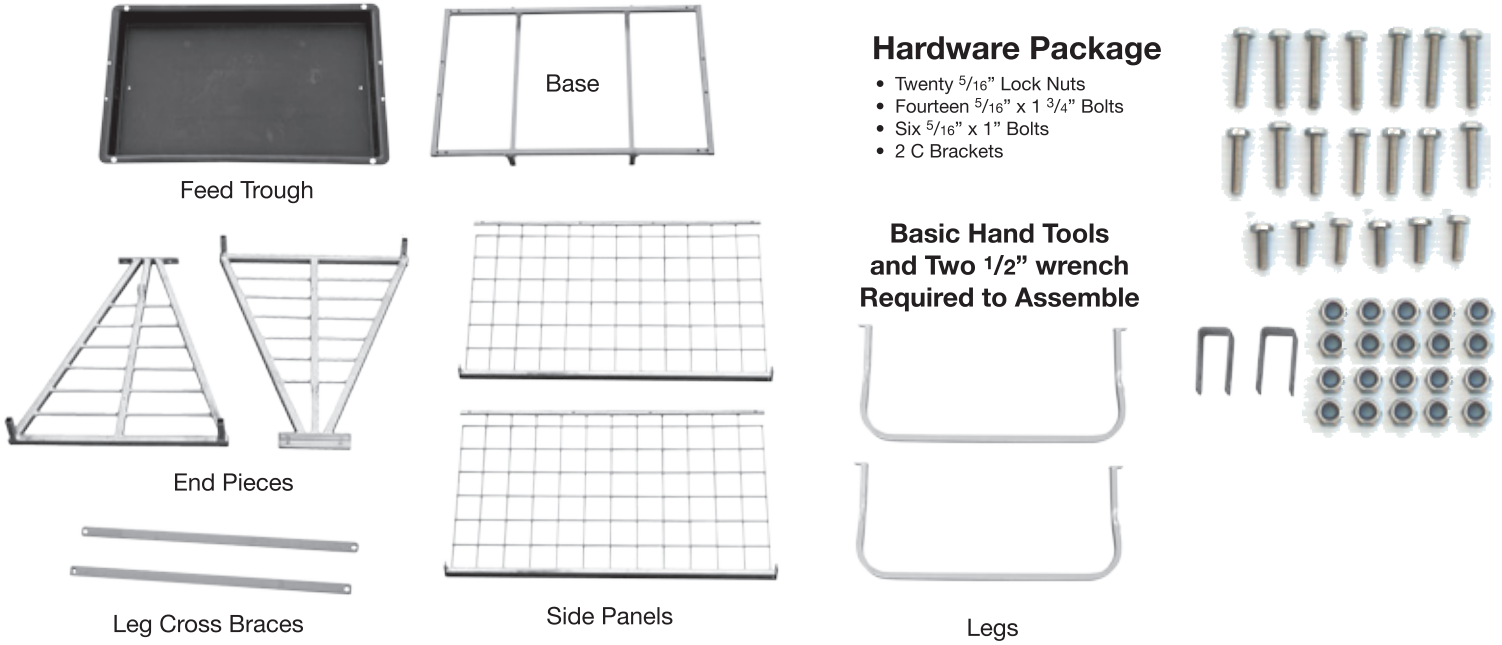

- Hardware Package**
- Twenty $\frac{5}{16}$ " Lock Nuts
 - Fourteen $\frac{5}{16}$ " x $1 \frac{3}{4}$ " Bolts
 - Six $\frac{5}{16}$ " x 1" Bolts
 - 2 C Brackets

Basic Hand Tools and Two $\frac{1}{2}$ " wrench Required to Assemble

Note: Do not tighten lock nuts until all bolts and component parts are in place.



Step 1

With base upside down, bolt legs into place with four $\frac{5}{16}$ " x $1 \frac{3}{4}$ " bolts. (Do not tighten bolts completely)



Step 2

Bolt leg cross braces into place with four $\frac{5}{16}$ " x 1" bolts. Now tighten all bolts.



Step 3

Lay the feed trough into the base.




Step 4

Bolt end pieces into place with four $\frac{5}{16}$ " x $1 \frac{3}{4}$ " bolts. (Do not tighten bolts completely)




Step 5

Bolt side panels into place with four $\frac{5}{16}$ " x $1 \frac{3}{4}$ " bolts. (Do not tighten bolts completely)

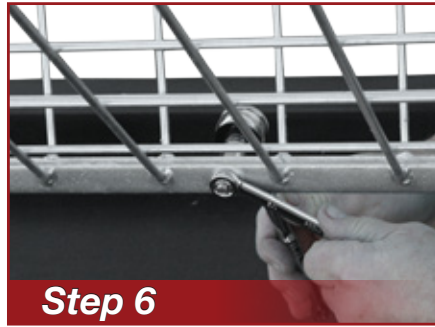

Step 6

Bolt the side panels together at the bottom with two $\frac{5}{16}$ " x 1" bolts.

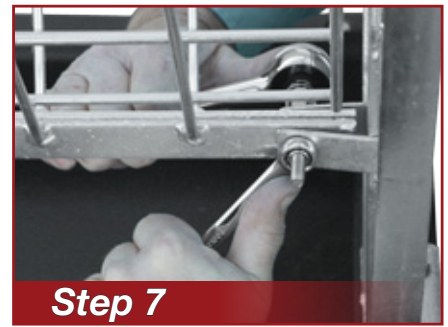

Step 7

Using the C-brackets, fasten the side panels to the end pieces with two $\frac{5}{16}$ " x $1 \frac{3}{4}$ " bolts. Tighten all the bolts.



Step 8

Your feeder is now complete!



Features of the Basic Goat & Sheep Feeder

- Eliminates nearly all forage, hay, and grain waste
- Loose hay and leaves fall in bunk, not on the ground, for reduced waste and healthier goats / sheep
- Lightweight for ease of mobility



DOUBLE L GROUP LLC

- Hot-dipped galvanized steel for extended life
- Accommodates 10 mature goats and sheep at feeding time
- Durable, long lasting black polyethylene trough - one piece construction for easy cleaning
- Extra wide footprint for added stability

PO Box 324, 2020 Beltline Road, Dyersville, Iowa 52040-0324 toll-free 800-553-4102 ph 563-875-6257 fx 563-875-6258 e-mail klewis@doublel.com web www.doublel.com

DISCLAIMER OF WARRANTIES AND LIMITATION OF REMEDIES: DOUBLE L GROUP, LTD. DISCLAIMS ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. UNDER NO CIRCUMSTANCES, SHALL DOUBLE L GROUP, LTD. OR ANY OF ITS EMPLOYEES, DIRECTORS, OFFICERS, OR AGENTS, BE LIABLE FOR ANY DIRECT OR INDIRECT LOSSES OR DAMAGES ARISING FROM OR RELATED TO ANY PRODUCT PURCHASED, WHETHER SUCH DAMAGES ARE GENERAL, SPECIAL, CONSEQUENTIAL, INCIDENTAL, ECONOMIC, EXEMPLARY OR OTHERWISE (INCLUDING BUT NOT LIMITED TO DAMAGE OR INJURIES TO PERSONS, PROPERTY, OR ANIMALS). WHETHER IN TORT OR CONTRACT, EVEN IF AN AUTHORIZED REPRESENTATIVE OF DOUBLE L GROUP, LTD. HAS BEEN ADVISED OF OR SHOULD HAVE KNOWN OF THE POSSIBILITY OF SUCH DAMAGES.